



Sony Cyber-shot DSC-P100 LCD Screen Replacement

This is a step-by-step guide to disassembling the LCD screen in the Sony Cyber-shot camera.

Written By: Katie McCraw





TOOLS:

- [Heavy-Duty Spudger](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Back Casing




- It is necessary to first locate the appropriate screws in order to disassemble the back casing.

Step 2



- Remove the found screws with a small screwdriver.
- ⓘ It is important to put the small screws in a safe location in order to reassemble the casing.

Step 3

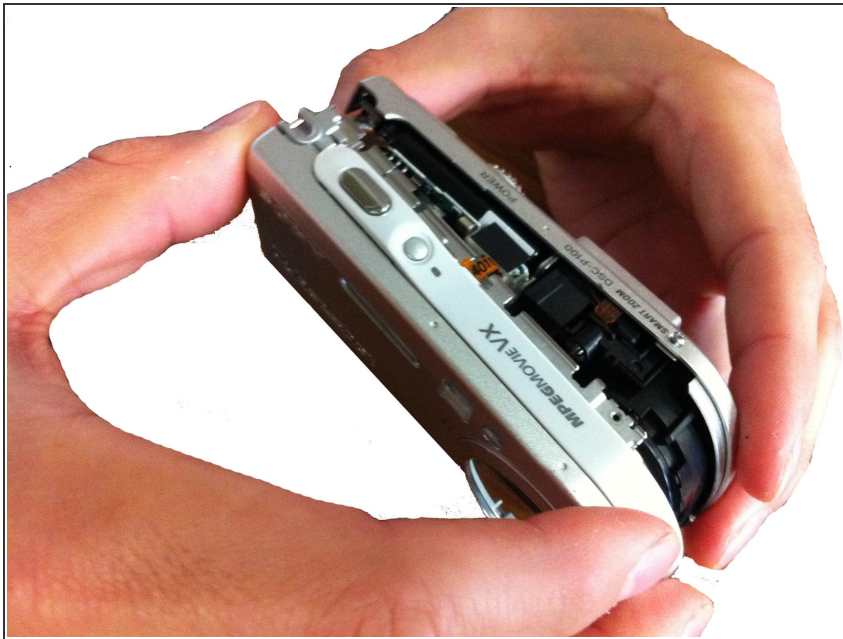


- Carefully pull the back casing away from the camera.

Step 4





- The back casing is now removed from the camera.

Step 5 — LCD Screen

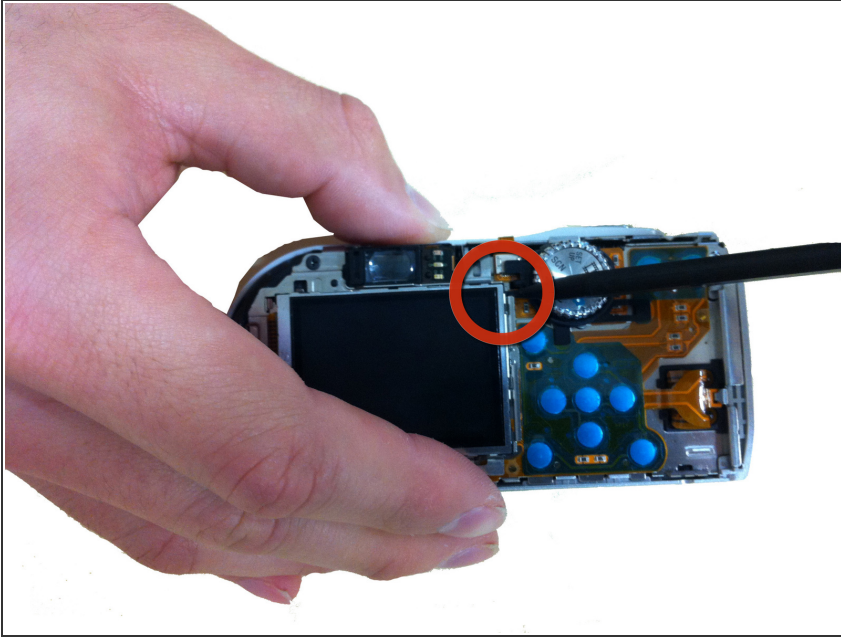


- Using a pry tool, gently pry the top right corner of the LCD screen up. Pry the screen until the four tabs release the screen from its current position.

Step 6

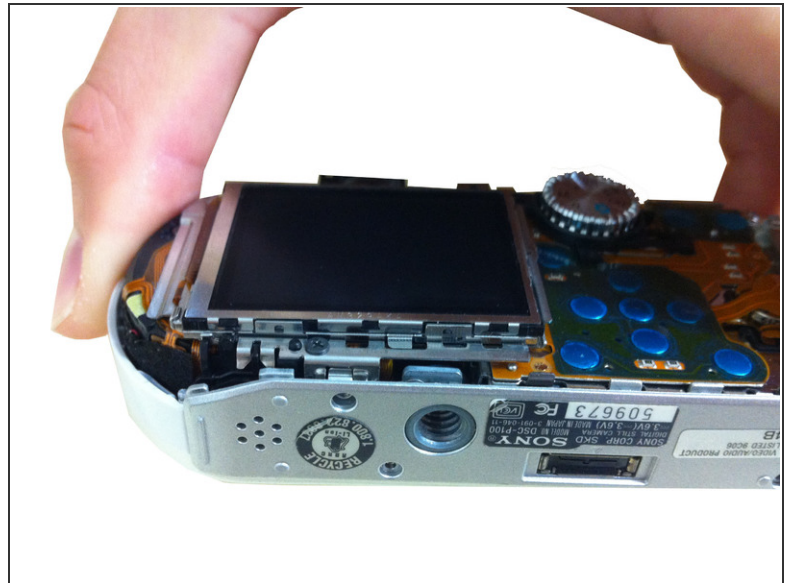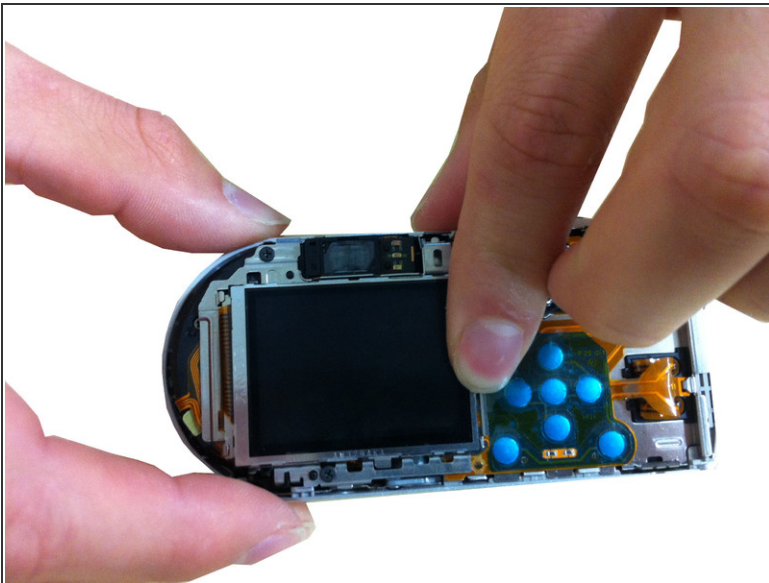


- Push the metal tab on the right side of the screen until the plate underneath the LCD screen is released.

Step 7

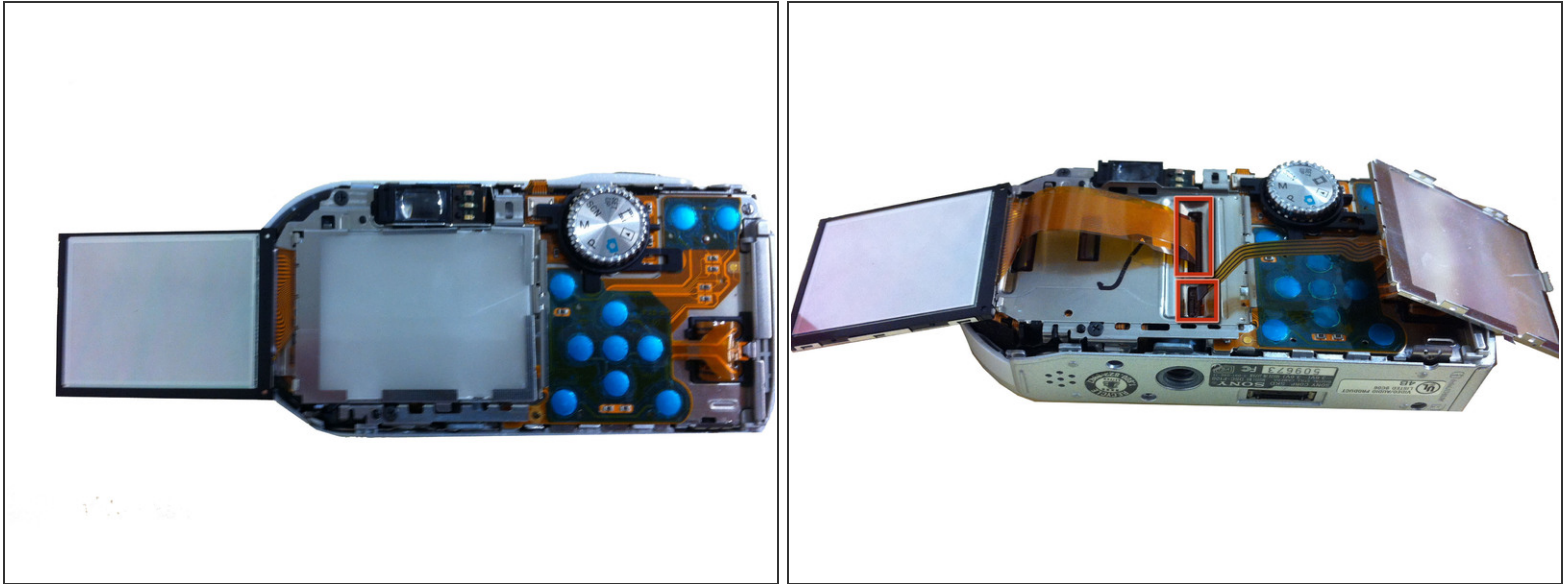

- Unfold the LCD screen and the plate underneath.
- Now the traces holding the screen and plate in place are visible.

Step 8

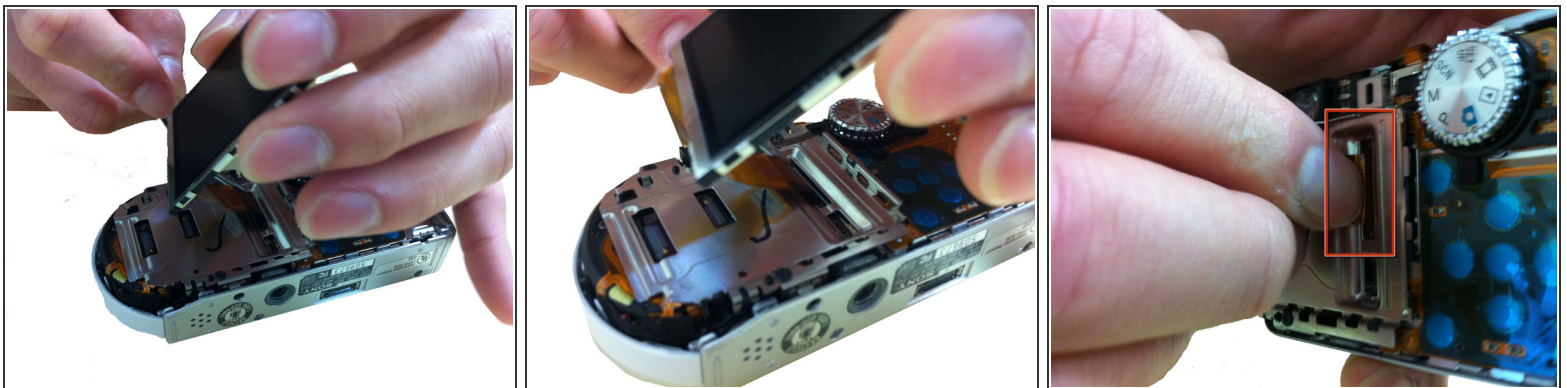

- Remove the LCD screen plate by gently pulling upward on the trace until the screen is removed from the camera.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 05:09:20 PM.